



# Star Printer DIP Guide

 **LINGA POS SUPPORT**

# Star Printer DIP Guide

- Supported Printers and Settings
  - **SP500 and SP700**: Set DIP switch 4 OFF
  - **TSP650, TSP650II, TSP70II, and FVP10**: Set DIP switch 1-1 (On the group of 8) OFF
  - **TSP800II**: Set DIP switches 1-1 and 1-2 (On the group of 8) OFF
- The DIP switches are located on the bottom of the printer. Make sure the printer is OFF before making any changes.
- Remove the screw from the DIP switch cover and remove. Then, set the DIP switch using a ballpoint pen or similar tool.

- **Example:**  
**DIP switch setting for TSP800II**

